

SUPER-6
ELECTRONIC SINGLE/DUAL DISPLAY
WEIGHING/COUNTING SCALE

USER'S MANUAL

Thank you for using our **SUPER-6** serial single/double side displays product of electronic waterproof weighing/counting scale. The housing is stainless steel.

The scale is manufactured with advances computer-controlled hi-techniques. It has the characteristics of satisfactory in performance accurate in weighing, convenient for carrying, cheap in price. It is sturdy and durable and widely used in not only retail stores and weighing of ration packing of commodities but also in high humidity surroundings because of it's well waterproof function.

Please read the manual before turn on the scale.

1. MAIN TECHNICAL INDEX

1.1 Basic Data

DATA TYPE ITEM	SUPER6 -600	SUPER6 -1.5	SUPER6 -3	SUPER6 -6	SUPER6 - 15	SUPER6 - 30
Max. Capa.	600g	1500g	3000g	6000g	15kg	30kg
Min. Capa.	20e					
Test Divi.	0.2g	0.5g	1g	2g	5g	10g
Display Divi.1	0.1g	0.2g	0.5g	1g	2g	5g
Display Divi.2	0.05g	0.1g	0.2g	0.5g	1g	2g
Max. Tare	100% Max. Capa.					
Accuracy	III					
Pan Size	19 × 23 cm					

1. 2. Working Temperature : -5~+35°C

1. 3. Storage Temperature: -25~+50°C

1. 4. Power: 6V4.5Ah rechargeable battery.

1. 5. Net Weight: 4kg/pc

1. 6. Dimension: 4pcs/ctn, 20kgs, 70x36x32cm

2. KEYBOARD AND CHARACTER PROMPT

2.1. Keyboard

- ON/ZERO** Turns the scale on and zero.
- TARE** Tare key.
- OFF** Power off.
- SET/0~9** Set/Fig. Key. Set parameter and input Fig.

2. 2. Character Prompt

dc x.xx: Mean the voltage of battery is x.xx V.

----- : Show this as the weight over 100%FS+9e, with the ding sounding, this means over load, reduce the weight.

-bAtLo-: The voltage is lower. You can use a short while and charge immediately.

c_End: Recharge is end.

Err-0: Overload zero of loadcell. Please reduce the tare.

3. OPERATION GUIDE

3. 1. Preparation

Adjust the base foot, watch the level, make the pan in horizontal.

3. 2. Turn on or turn off

3.2.1 Turn on

Press the **[ON/ZERO]** key, the ding sound, it displays version No. and dc-x.xx (the battery voltage level) and 9,8,7...1,0, the **"ZERO"** lamp lighting. Now the scale is in a working state.

3.2.2 Turn off

Press **[OFF]** key.

3.2.3 Auto-off

After 10 minutes in zeroing, auto-off. (See 3.9.3)

3.2.4 Low voltage auto-off

When the voltage lower than 5.6V, then power-off.

3.3. ⁰Zero

When without taring the weight display is $\leq 4\%$ Max. capa., press the [ON/ZERO] key, the display shows "0", the zero lamp lighting.

3.4. Weighing

Put weight to pan.

3.5. Tare weighing

Press the [TARE] key, it's being think the "skin" tare, the weight display is "0", the "ZERO" lamp off, the "TARE" lamp lighting. Pick up the weight and the "skin", the weight display is negative, the "ZERO" lamp lighting, press the [TARE] key, the "TARE" lamp off.

3.6. Save power function

Zero after 40 seconds, auto save power, shows "0". Put a weight start weighing

3.7. Battery indicate.

Battery lamp: "High" \pm means voltage higher than 6.3V, "Mid" means voltage between 6V and 6.3V, "Low" means voltage lower than 6V.

3.8. Charge

Power supplied by a internal rechargeable lead acid battery (6V/4.5Ah). When it shows "-bAtLo-". Please turn off and charge immediately. The time of full charging is 12 hours.

3.9. Set parameter

Press [SET/0~9] key 3 seconds to set. Now show menu. Press [SET/0~9] continuous it displays :

rAngE(set limit)

UnItS(choose unit)

A-oFF(choose auto power off)

FILt(set display mode)

ZERo(set auto zero)

bUZZEr(set buzzle)

d(choose division)

on-rA(choose range of power on)

d-dP(choose single or dual display)

[SET/0~9] is select key, [TARE] to confirm.

3.9.1 r AngE (Set of upper and low limit):

3.9.1.1 When it shows rAngE, press [TARE] and then [SET/0~9] to choose on or oFF, on is start the function, oFF is exit, press [TARE] to confirm.

3.9.1.2 When choose on and press [TARE], now weighing with limit, "under" lighting, max figure is blinking, press [SET/0~9] once to add 1, press [TARE] to confirm, when finishing auto exit and set "over". After setting into weighing.

3.9.1.3 When low limit > high limit, it displays off, then exit.

3.9.1.4 Alarming indicate

"m" is the weight

when $m \geq$ high limit, "over" lamp is lighting.

When low limit $< m <$ high limit, "accept" lamp is lighting.

When $m \leq$ low limit, "under" lamp is lighting.

Caution: When the display is not stabilization, no lamp lights.

3.9.2 UnitS (Change unit)

3.9.2.1 When it displays "units", press [TARE], then press [SET/0~9] to choose, then press [TARE] to confirm and exit.

Unit: H9(kg), 9(g), Lb.lb, Lb.oz, pcs(counting).

3.9.2.2 **counting:** When it displays "pcs", press [TARE]. Now "pcs" lamp lighting.

Longtime press [ON/ZERO], it displays count and return to 0. then put certain amount samples (The weight should less than Max. capacity) and press [TARE].

Press [SET/0~9] to add 1 (Amount of sample) and press [TARE] to choose. Note: the amount of samples should less than 1/2 internal value. After finishing it display pcs and pcs lamp lighting.

Exit counting: choose a unit.

Caution: The amount of samples should less than 30000

3.9.3 A-oFF(choose auto power off)

When menu displays A-oFF,press [TARE] to enter,press [SET/0~9] to choose no or yes, no is not auto power off,yes is after 10 minutes in zeroing, auto-off.

3.9.4 FILtX (Change display mode)

When it displays "FILtX", press [TARE] to enter,. press [SET/0~9] to choose FILt-1,FILt-2,FILt-3, press [TARE] to confirm and exit.

FILt-1: Display renew speed is slow.

FILt-2: Display renew speed is fast.

FILt-3: Display renew speed is faster.

3.9.5 Zero (Set range of auto-zero):

When it displays zero, press [TARE], now show zero x.xE

(x.x is the range, displayed by Test division:0.5E,1.0E,1.5E,2.0E,2.5E,3.0E,3.5E,4.0E,4.5E,5.0E.). Press [SET/0~9] to choose and [TARE] to confirm.

3.9.6 bUZZEr (set buzzle sound on or off)

When menu displays bUZZEr,press [TARE] to enter,press [SET/0~9] to choose on or off, press [TARE] to confirm.

3.9.7 d (Change division figure)

When menu displays d,press [TARE] to enter,press [SET/0~9] to choose division. There have 3 division for choosing, when choose the mini. One, the display renew speed will be slower.

3.9.8 On-rA (choose range of power on)

When menu displays On-rA,press [TARE] to enter,press [SET/0~9] to choose 20 or 100, 20 is 20% Max. capacity, 100 is 100% capacity. Press [TARE] to confirm.

When turn on zero more than 20% Max. capacity, it displays Err-0, Err-4, please reduce the tare less than 20%.

3.9.9 d-dP (choose single or dual display)

When menu displays d-dP,press [TARE] to enter,press [SET/0~9] to choose no

or yes, no is single display, yes is dual display, Press **[TARE]** to confirm.

3.10 Tune LED lighting

On powering on, long time press **[zero/on]**, it shows LC-1, press **[SET/0~9]** to choose LU-1 or LU-2, LU-1 is saving mode (command), LU-2 is brighter. Press **[TARE]** to confirm.

4. NOTE

4.1. COMMON ATTENTION

4.1.1. Please read the manual before turn on the scale.

4.1.2. Not overloading. Not throw heavy things on the scale violently. The damage for overloading is not within the range of guaranteed maintenance.

4.1.3. Don't use sharp thing to operation the keyboard. If the rubber is damaged it will influence the performance of waterproof.

4.1.4. Keep the scale clean in order to weighing well.

4.1.5. Don't touch solvent chemicals.

4.1.6. There is a lead seal on the bottom of the scale. Users are not allowed to remove the seal. If the seal is damaged the scale is not guaranteed for maintenance.

4.2. BATTERY INSTRUCTION

4.2.1. Working temperature is $-10^{\circ}\text{C} \sim +40^{\circ}\text{C}$, it could be used 300 times on 20°C .

4.2.2. You must charge the battery at least per 3 months when you don't use the scale for a long time.

4.2.3. Please correctly connect line between adapter and battery, black to black, red to red.

4.2.4. If after charging the used time becomes short than often, please change a new battery.

4.2.5. We have one month warranty for battery.